

Changing your safety edge batteries on a sliding gate

You need to change your safety edges batteries at least one a year and every-time the gate starts to behave intermittently.

It transmits the signal from the safety edges on the gate leaf to the motor.

There are two types- Type 1 has 6 screws on the front and takes 2 no. CR 2032 batteries

Type 2 has 2 screws on the front and takes 1 no. CR 2450 battery



Type 1 2 x CR2032



Type 2 1 x CR2450

Unscrew the cover, take note of which way round the batteries go, take a picture if necessary.

Once the batteries are replaced press the safety edge on the leading edge of the gate. A small light will flash. Replace lid.

Make sure the 6 button lid goes on the right way up so the CE is at the bottom.

The gate should work.

If it does not you can check the diagnostic code on the motor by removing the blue cover and looking on the digital display. Contact us for further help at 01371831731

mail@wellingtonsecurity.co.uk

